



WeldSense™



from Associated Equipment Corp.

[www.aceindustrialproducts.com](http://www.aceindustrialproducts.com)

## Filter Change Guide

### Mobile Welding Fume Extractors

Filter condition is determined by reading the analog gauge located on the face of the equipment. The analog gauge will look like one of the two shown in the photos below.

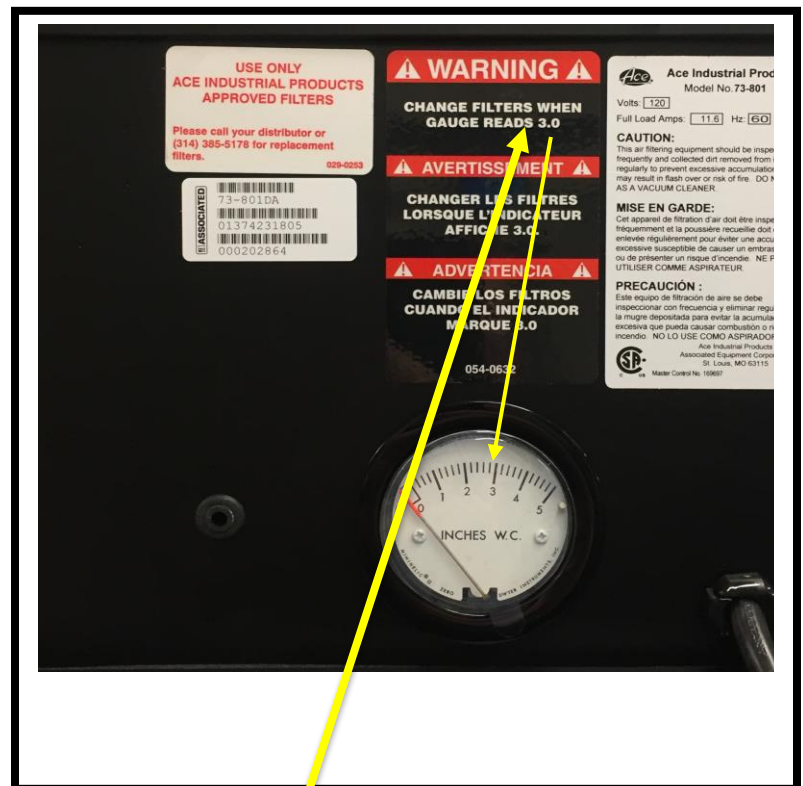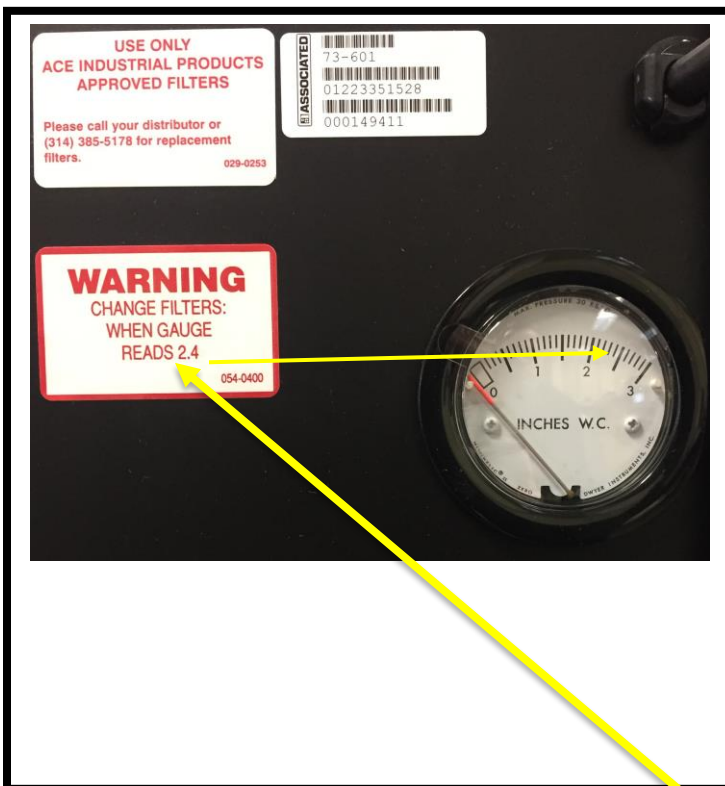

1. When the needle on the gauge reaches a **pre-determined number** as indicated on the warning label, change the pre-filter.
2. Once the new pre-filter is installed, the gauge will return to a normal operating range until such time that the needle returns to the pre-determined number.
3. If the needle does not return to a normal operating range, this indicates that the main filter also needs to be replaced.
4. The ratio of filter changes is usually 3 to 1...three pre filter changes per one main filter change.